







# Microwave Wall Pantry Cabinet Assembly Instruction


## (Item:MWP2796)

Hardware list	1   20pcs   $\varnothing 4 \times 16 \text{mm}$	2   10pcs   $\varnothing 4 \times 19 \text{mm}$	3   20pcs   $\varnothing 3.5 \times 14 \text{mm}$	4   16pcs   $\varnothing 3.5 \times 16 \text{mm}$	5   8pcs   $\varnothing 3.5 \times 35 \text{mm}$	6   10pcs   1-1/4"	7   12pcs   6mm	8   1set   S30B533H10GA08						
	Flat head screw	Round head screw	Color galvanized screw with flat head	Color galvanized screw with flat head	Black screw with flat head	Hinge	Shelf clips	Drawer slide						
														
Assembly tools required	Screw driver	Rubber mallet	J   Door (4) I   Drawer box (3) H   Adjustable shelf (3)		11   4pcs   40mmx40mm Bracket rainbow 90°	10   2pcs   $\varnothing 7$ Bumper	9   4set L-shape bracket	8   2set   22" Steel ball slide						
														
Cabinet Part List	A	Front frame	B	Side panels (2)	C	Bottom panel (1)	D	Top panel (1)	E	Fixed shelf (2)	F	Back panel	G	Toe kick

Step 1 : With front frame (A) of cabinet lay down on clean and soft surface then put glue into groove.

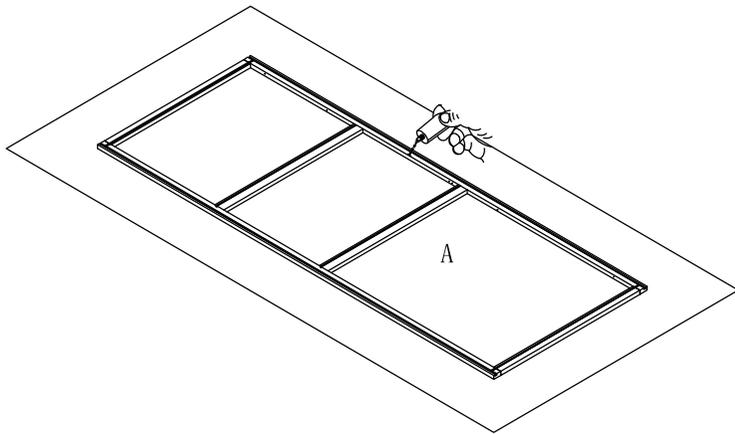


Step 2 : Install side panels. Insert side panel into groove of front frame (A) until side panel and front frame even.

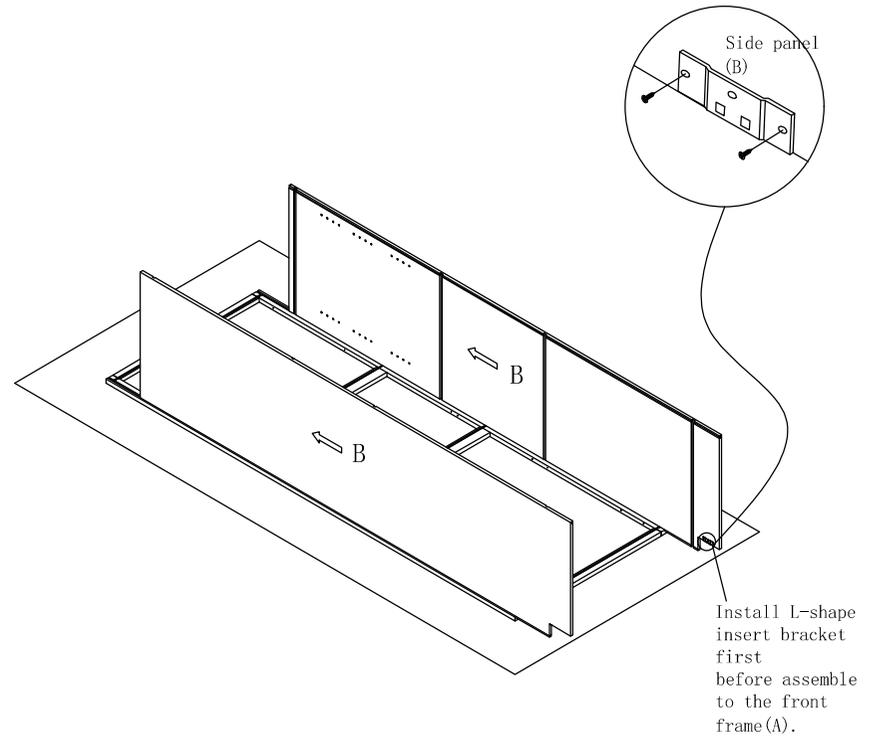


# Microwave Wall Pantry Cabinet Assembly Instruction

(Item:MWP2796)


Step 3 : Install top&bottom panel and fixed shelf. Insert top panel(D) bottom panel(C)and fixed shelf (E) into groove of front frame (A) until it into the groove of front frame (A).

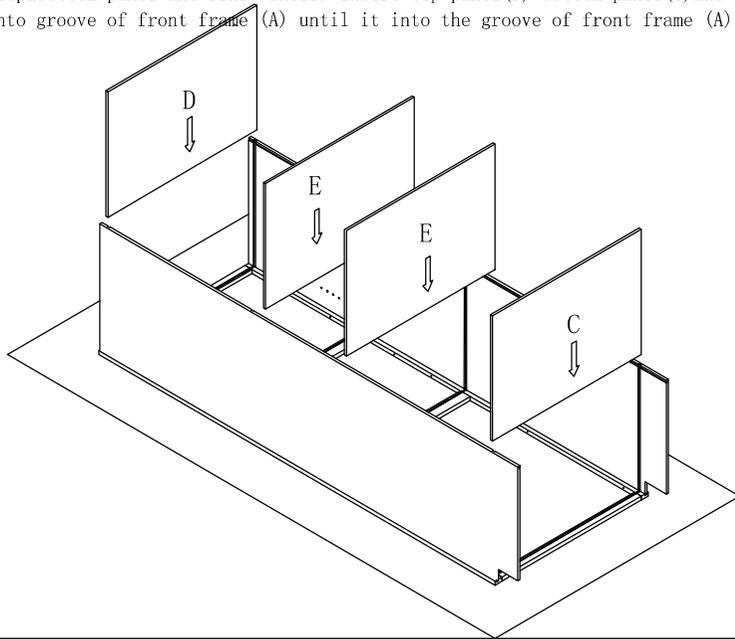


Step 4 : Install back panel(F).until bottom panel and top panel and fixed shelf into the groove of back panel.

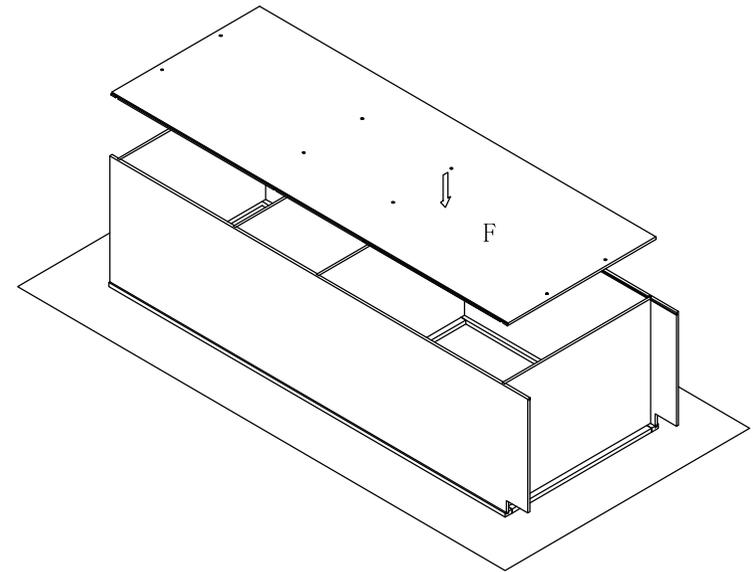

Step 5 : Install assembly screws(5)Ø3.5x35mm into back panel (D) then fit in the L-shape insert bracket from front frame (A) into bottom panel (C) bracket and screw the bracket with(3)Ø3.5x14mm screw

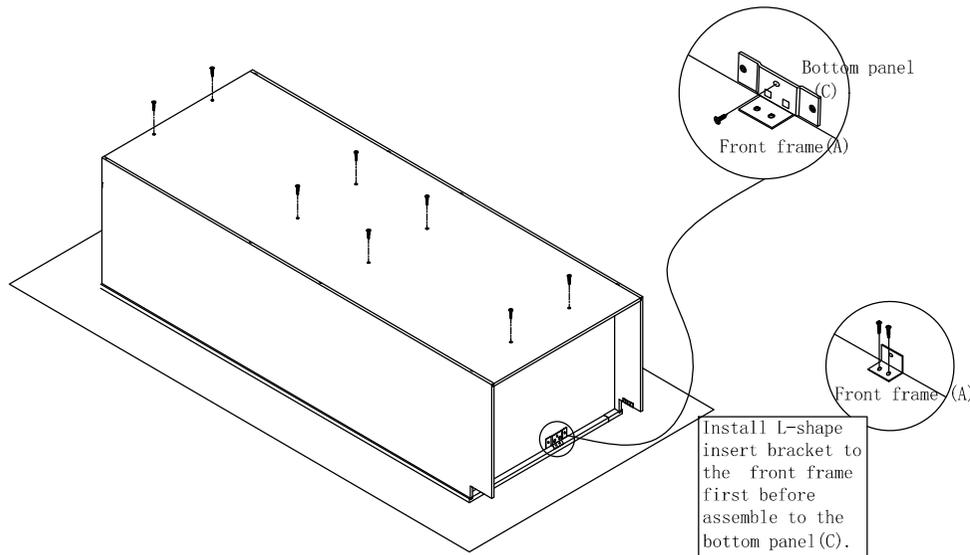


Step 6 : Install toe kick panel(G).Fit in the L-shape insert bracket from toe kick panel (G) into side panel (B) bracket and screw the bracket with(3)Ø3.5x14mm screw.

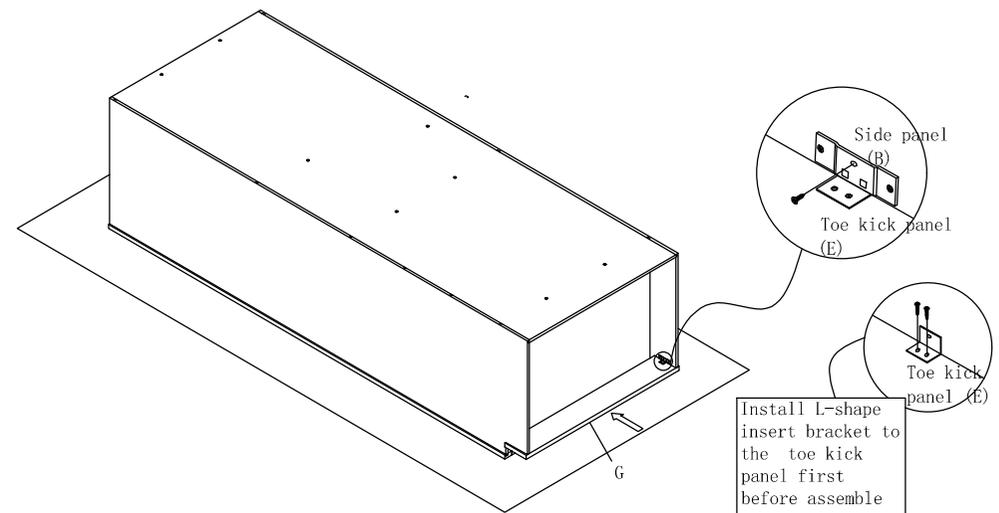

# Microwave Wall Pantry Cabinet Assembly Instruction


(Item:MWP2796)

Step 7 : Install back panel. Fit in the L-shape insert bracket from back panel (D) into side panel (B) bracket and screw the bracket with (3)  $\varnothing 3.5 \times 14 \text{mm}$  screw.

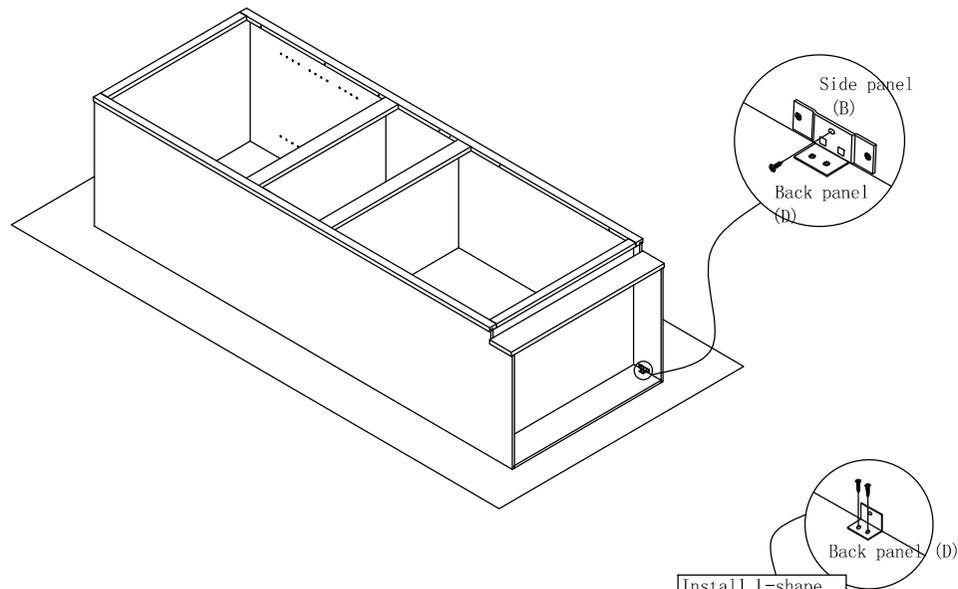

Install L-shape insert bracket to the back panel (D) first before assemble to the side panel (B).


Step 8 : Install door panel (J) and corner block. screw the hing to the door and face frame, then install rainbow bracket to the side panel (B), front frame (A) and back panel (D) with the (4)  $\varnothing 3.5 \times 16 \text{mm}$  screw.

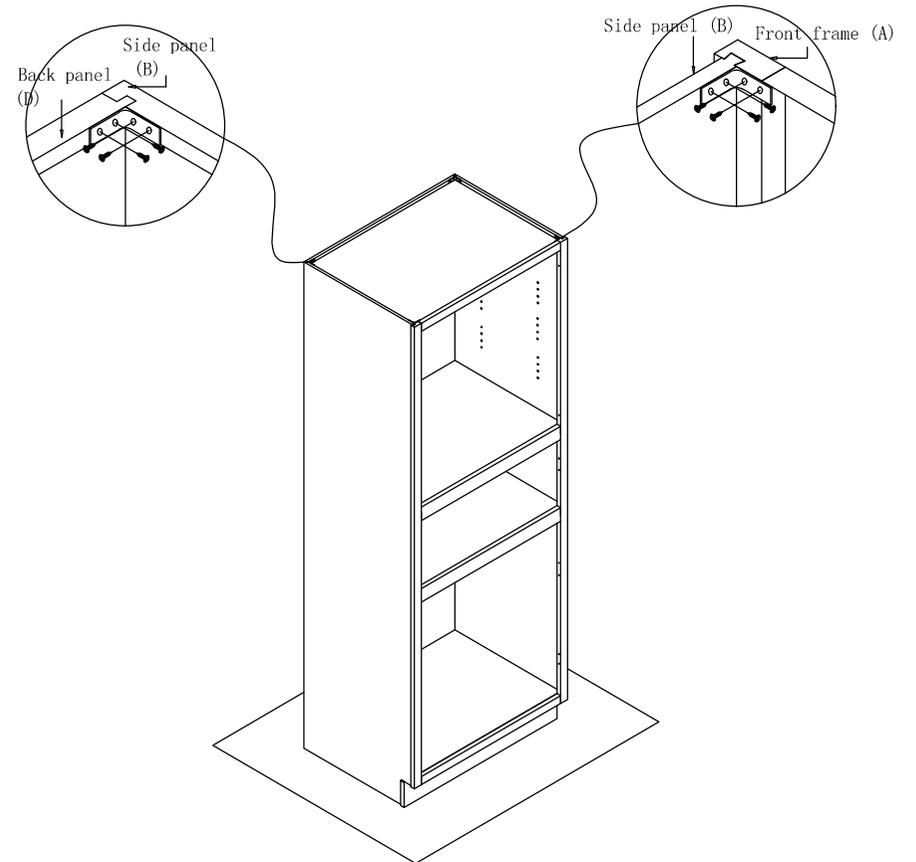


# Microwave Wall Pantry Cabinet Assembly Instruction

(Item:MWP2796)

Step 9 : Install drawer slide rear brackets and shelf clips. Screw the drawer slide rear bracket to the back panel and insert shelf clips into side panels.

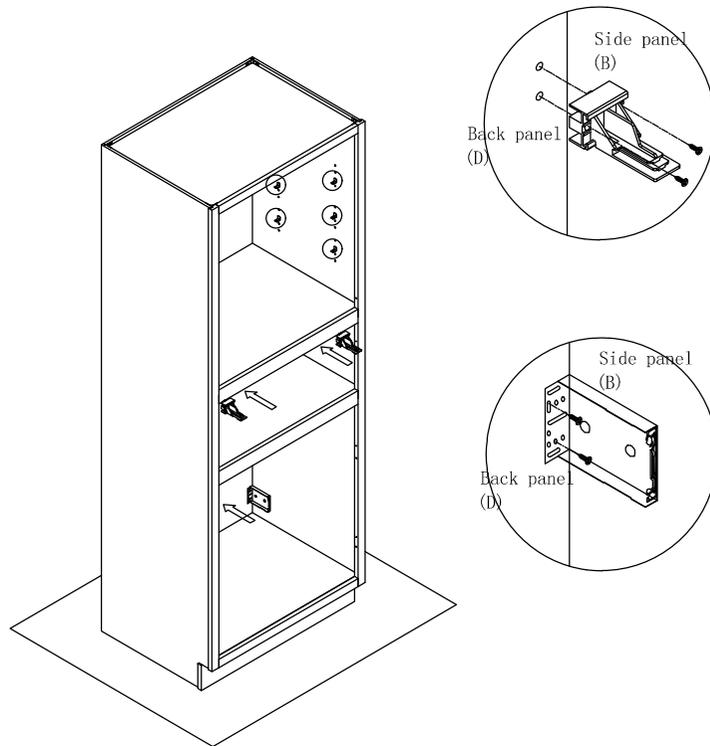


Step 10 : Install adjustable shelf(H) and drawer slide. Put the adjustable shelf on the shelf clips and Insert drawer slide runner to the rear slide bracket and screw the drawer slide to the guide hole of front frame (A) and hole for drawer slide, then screw the steel ball slide to the drawer side panel of drawer box.

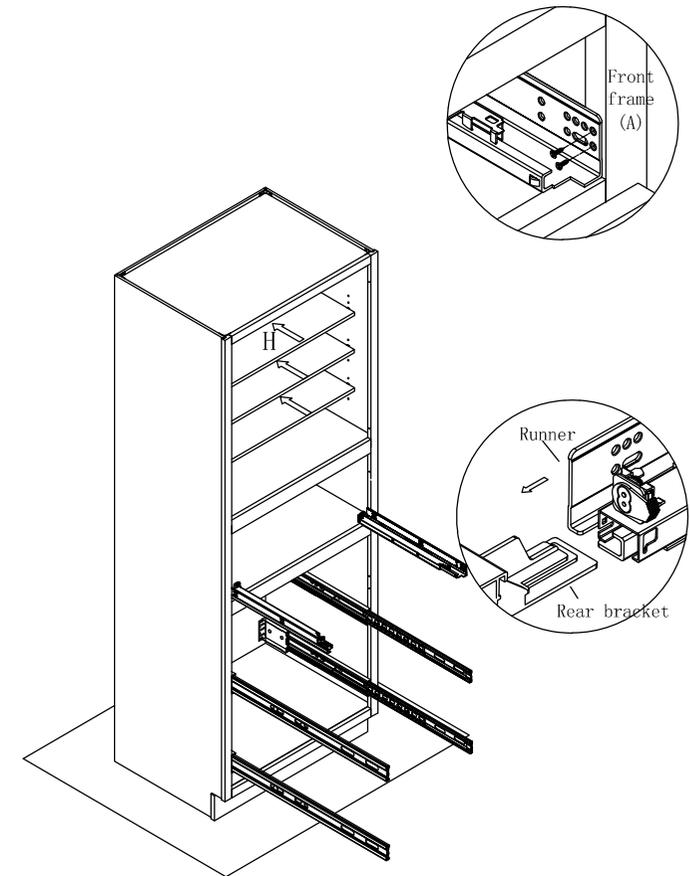



# Microwave Wall Pantry Cabinet Assembly Instruction

(Item:MWP2796)

Step 11 : Put the drawer box on the drawer slide and push the drawer box to make it the end of the runner is locked to the hole of the drawer back panel. Complete the installation of the drawer box when you hear the sound "click" which means the locking device is locked on the drawer slide.

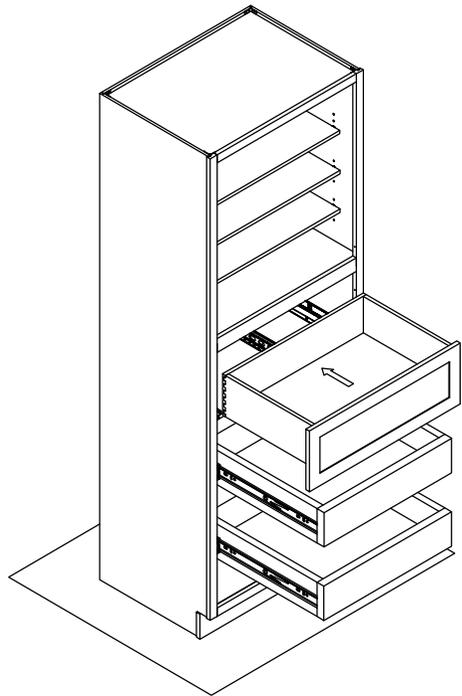

Step 12 : Install door panel(J). screw the hing to the door and face frame.

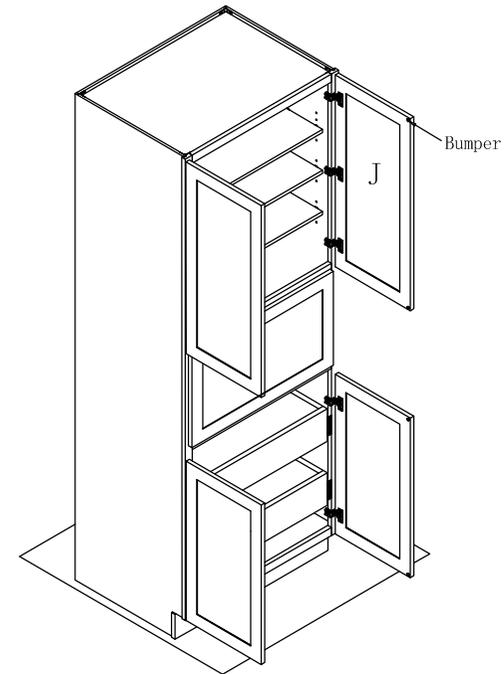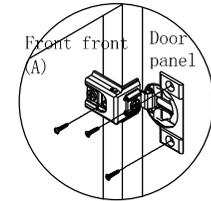

# Microwave Wall Pantry Cabinet Assembly Instruction

(Item:MWP2796)

Step 13 : Finish installion of the cabinet.

